

PARTS LIST 1

ITEM NO.	PART NO.	DESCRIPTION	中文品名	QTY
1	WKYMJ280-001	PLATE	盘	1
2	WKYMJ280-002	PLATE CONNECTION	盘连接件	1
3	WKYMJ280-003	RUBBER	缓冲橡胶	1
4	WKYMJ280-004	MOTOR CONNECTION	电机连接件	1
5	WKYMJ280-005	BEARING	轴承	1
6	WKYMJ280-006	BEARING BLOCK	轴承座	1
7	WKYMJ280-007	DUST COVER	防尘罩	1
8	WKYMJ280-008	DRIVEN PULLEY	从动皮带轮	1
9	WKYMJ280-009	SHIELD	防护罩	1
10	WKYMJ280-010	BODY1	机身1	1
11	WKYMJ280-011	POSITIONING PLATE	电机定位盘	1
12	WKYMJ280-012	DRIVING PULLEY	主动皮带轮	1
13	WKYMJ280-013	MOTOR	电机	1
14	WKYMJ280-014	WHEEL(180mm)	轮子	2
15	WKYMJ280-015	ADJUSTMENT LEVER	调节杆	1
16	WKYMJ280-016	SLEEVE	杆套	1
17	WKYMJ280-017	LEAD SCREW	丝杆	1
18	WKYMJ280-018	SELF-ALIGNING BEARING	调心轴承	1
19	WKYMJ280-019	CHUCK	卡盘	1
20	WKYMJ280-020	CRANK	摇杆	1
21	WKYMJ280-021	OPERATING CRANK	摇柄	1
22	WKYMJ280-022	BODY2	机身2	1
23	WKYMJ280-023	HANDLE CONNECTION	扶手连接件	2
24	WKYMJ280-024	HANDLE	扶手	1
		SWITCH	开关	1
		CABLE	电线	1
		CAPACITOR(START,RUN)	电容器 (启动, 运转)	1

